




## Surface stain

Surface stain on a countertop finished with Bizzz Polymerized Oil

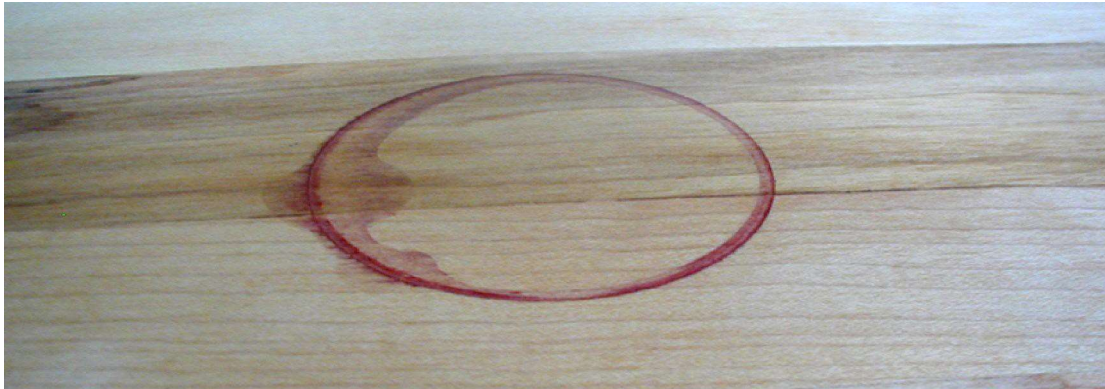


This problem usually occurs when a colored liquid is left on the surface or when a hot liquid is spilled. Examples are the rings left from a glass of red wine or a cup of coffee forgotten on the counter.

Materials required to restore your Bizier countertop




Polymerized Oil

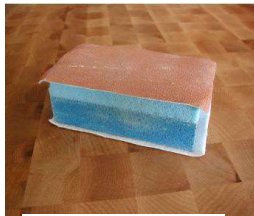

Sanding Block



Orbital Sander

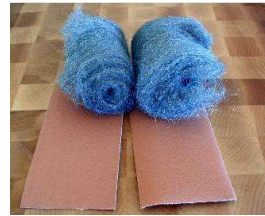

Sand Paper, Steel Wool



Soft Cloth

Using the sanding block with 150 grit sandpaper, sand the stained area of the counter in the direction of the wood grain, until the stain disappears. If the stain is deep, use an orbital sander with 120 grit paper followed by another surface sanding, in the direction of the wood grain, with 150 grit paper on the sanding block. Wet the sanded area and let it dry. Smooth the surface again with 180 grit paper. Remove wood dust with a vacuum cleaner. Apply a layer of polymerized oil with a soft cloth. Wait 15 minutes then wipe and polish vigorously with a soft cloth or steel wool 0000. Wipe again with a clean, soft cloth. It is very important to wipe the excess oil not absorbed by the wood, otherwise the excess oil will form a sticky layer on the surface. If this happens, repeat the steps from the beginning.

We recommend that you wait at least three months before restoring the surface of a new counter. The counter must adapt to your home environment and your work habits. Remember that a counter finished with polymerized oil is very easy to restore, so do not be alarmed by a rough or stained surface.

### CAUTION:

- Rags soaked in oil are flammable. Immerse your rags in water before disposal.
- Polymerized oil contains tung oil and may cause an allergic reaction for people allergic to nuts.
- Water or other liquids should not be left to stagnate (for example, overnight) under a rubber mat or cutting board. Rags or wet towels left to dry on the counter are also to be avoided.
- Sources of intense heat, such as hot pans or small appliances that emit heat, should be kept away from solid wood countertops.